

# **INSTRUCTION MANUEL**

## **Please read this guide first!**

Dear Customer, We would like to offer you the best yield for your product which is produced in modern facilities and passed through strict quality control. For this, please read this manual thoroughly before using your product and keep it as a reference.

## **This manual...**

It helps you to use your product quickly and safely.

- Read the instruction manual before using and operating the product.
- Particularly follow safety information.
- Keep it in a place where you can easily access the user guide as you may need it later.
- Also read the additional documentation supplied with the product. Please note that this manual may also apply to other models. The differences between the models are clearly highlighted in the guide.

**CONTENTS:**

- 1. Security Alerts**
- 2. Product Introduction And Technical Information**
- 3. Product Montage**
- 4. Product Usage**
- 5. Maintenance and Cleaning**
- 6. Your contribution to protecting the environment**



## Security Alerts


- The operating voltage is 220-240 volts.
- You can use pipes with a diameter of 120 mm or 150 mm when you make a chimney connection to your hood.
- Do not make connections to the boiler where the boilers are connected, the boiler that the waste gas is poured into, or the flame rising boom.
- The height between the bottom surface of your hood and the top surface of the oven / oven should not be less than 65 cm.
- Do not operate your hood without an aluminum filter.
- Do not remove the filter while the hood is operating.
- Do not touch these lamps after the lamps of your hood have been running for a long time. The heated lamps can burn your hand.
- Do not build a high flame under your hood. Otherwise, oil in the aluminum filter may ignite and cause fire.
- If cleaning is not carried out periodically, risk of burning may occur in your hood.
- After putting pots or pans on the stoves, run the hood.
- In order to clean the kitchen air well from the smell and the cooking stove, run the cooker for 15 minutes after cooking or frying is over.
- When the hood is in operation, especially when used together with gas cookers, ensure that fresh air enters the room. • Ambalaj malzemeleri tehlike oluşturabileceği için çocuklardan uzak tutunuz.
- Do not wear a prize prize before your hood is assembled.
- Make sure your child does not play with this product. Do not use this product for small children.
- This product is intended for use at home. Commercial use is not suitable and should not be used outside of its intended purpose.
- The physical, sensory and mental capabilities of this product should not be used by persons with disabilities (including children) or persons with experience or knowledge deficiencies unless supervision and management of the use of the product is provided by a person responsible for the safety of the product.
- Fats can catch fire when cooking fry. For this reason, pay attention to the curtains and curtains.
- When cooking fried foods do not leave the top of your cooker, hot oil may cause fire.
- Cut off the electrical connection of the product before any intervention in the interior.
- We advise you to be very careful when handling the interior of the hood and use gloves.
- We recommend that you operate the product a few minutes before starting the cooking process to increase your pulling power. So when you start to build vapors, you get continuous and constant traction .
- The negative pressure in the chamber must be no more than 0,4 mbar so that the waste gas from the hood of the other product can not be drawn back into the room by the hood if there is another product operating with energy other than electricity from the hood together with the hood.

• Our company will not be responsible for problems caused by non-observance of the above warning.

2

 
Product Introduction And Technical Information

WIDTH	492/792 mm
DEPTH	280 mm
HEIGHT	272 mm
VOLTAGE	220-240V, 50 Hz
CAPACITY	850 m3/h
POWER	194 W
MOTOR POWER	190 W
LAMPS POWER	2X2 W
AIR OUTPUT	150/120 mm
GROSS WEIGHT	9,5 / 12,3 kg
NET WEIGHT	8 / 10,7 kg

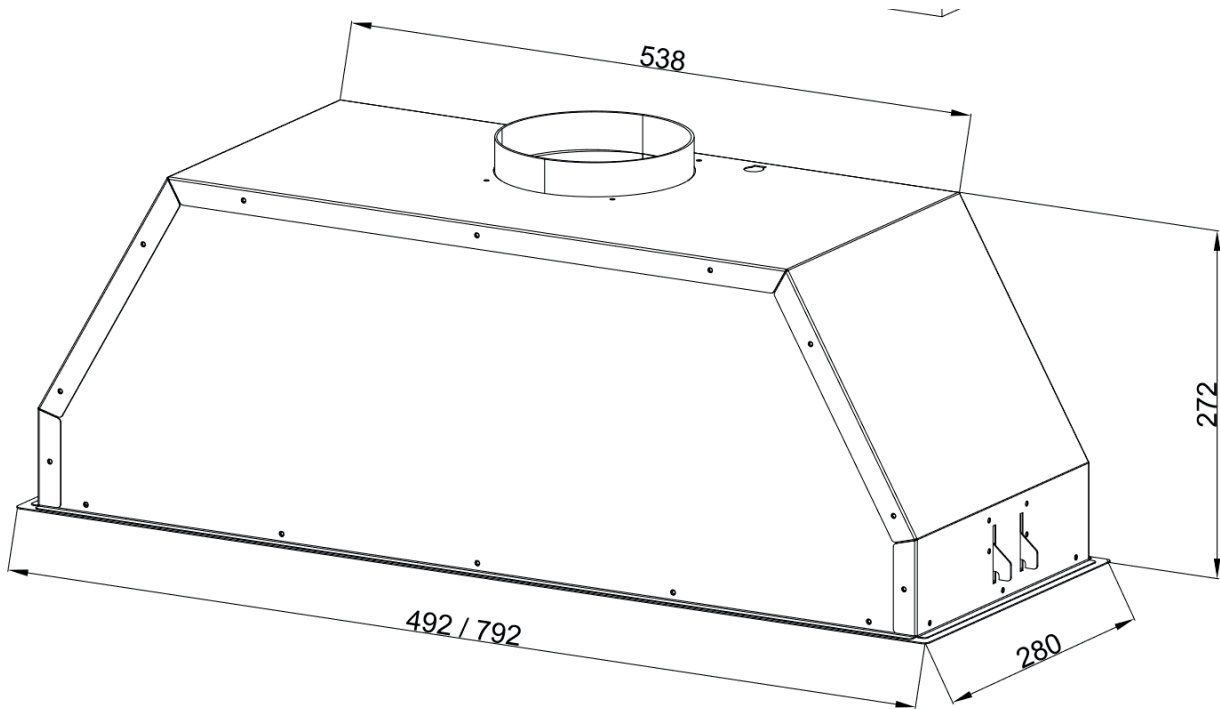




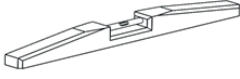



### 3 Product Montage

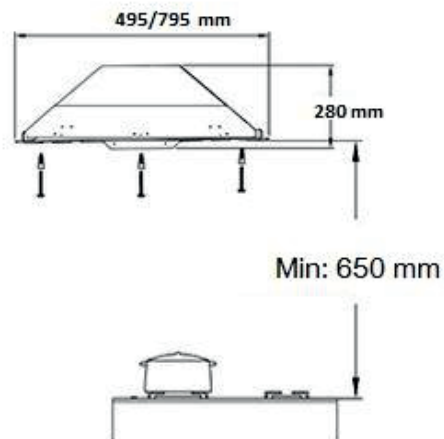



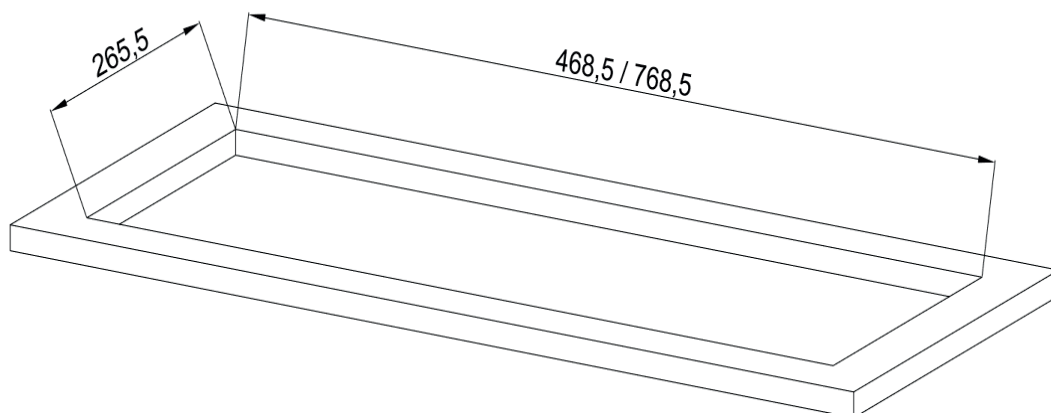

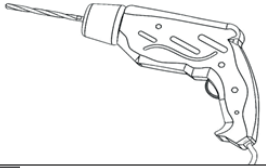
**Product location:** The height between the bottom surface of your hood and the top surface of the oven / oven should not be less than 65 cm.



**Preparations for assembly of the product:** The following information is necessary to make your location suitable for your habitat.



<p><b>Ø6, Ø8, Ø12</b></p> 	
	
	

 
	<p><b>Ø8x40</b></p>	<p><b>4x</b></p>
	<p><b>Ø5x40</b></p>	<p><b>4x</b></p>
	<p><b>Ø7</b></p>	<p><b>4x</b></p>
	<p><b>Ø3.9x19</b></p>	<p><b>6x</b></p>
		<p><b>1x</b></p>
		<p><b>1x</b></p>
	<p><b>120</b></p>	<p><b>1X</b></p>

**Aluminum pipe fitting:** One end of the aluminum pipe is the plastic bacquet on the product; And the other end to the kitchen sink. Make sure that these two connectors are tight enough that they will not come out of place when the hood is operating at the highest speed. The diameter of plastic bacan on the product is 150 mm. If aluminum pipe with a diameter of 120 mm is to be used, it is necessary to install a plastic reducer from the packaging.

4

## Product Usage

- We recommend that the cooker be opened before any food is cooked. At the same time, we recommend that your product be cooked for 15 minutes after cooking to remove all the dirty air.
- The effective performance of your hood depends on regular care; Oil filter requires special attention.
- The oil filter is used to catch oil particles suspended in the air; Therefore it reaches saturation for a certain period of time (the saturation of the filter depends on the method of use of the product).
- The lighting system is designed to be used during the cooking process; Please do not use it for a long time to general illumination of the room.

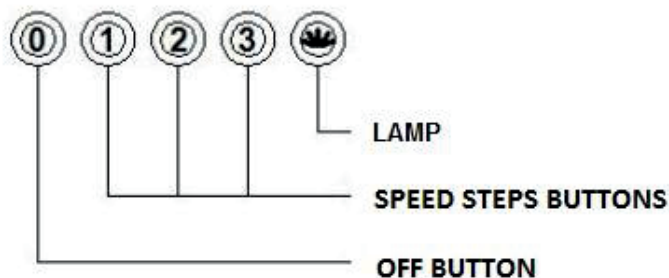


**Lighting button:** You can illuminate the cooking area by touching this area.

**Speed Steps:** Speed stages 1, 2 and 3 are indicated; You can start the aspirator as you wish by pressing any button.

**Off button:** Press this field to turn off the product while it is running.



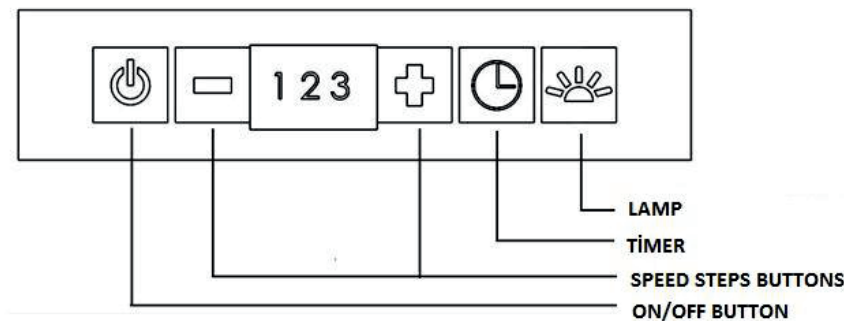

**Lighting button:** You can illuminate the cooking area by touching this area.

**On/Off button:** Touching this area will start working at the 2nd speed level when you turn on the product. Press this field to turn off the product while it is running.

**Speed Steps:** The cycle stages are denoted as 1, 2, 3 and 4; You can increase or decrease the product's running speed, respectively.

**Timer:** If you press the timer button while the aspirator is operating in any of the cycle stages, the aspirator will run for 15 minutes and will stop automatically after this time. When the automatic stop is activated, the speed indicator on the display will flash. It is sufficient to press this function again to deactivate it before 15 minutes.

## 5 Maintenance and Cleaning

Before maintenance and cleaning, remove the product plug from the socket, or switch off the switch or loosen the fuse that feeds the hood, then switch it off. Clean the hood made of sheet and glass painted with static powder paint with cleaning materials specially designed for this material.

- Never use metal rubbing cloths and abrasive materials (brush, dishwasher hard side, etc.).
- Dry your hood with a lint-free cloth.

### Aluminum filter

This filter helps keep the oil particles in the air. It is recommended that you clean your filter for 1 month in normal use. To do this, remove the aluminum filter first. Rinse the filters in water with liquid detergent and rinse them after drying. As the aluminum filters are washed, the color change can be observed and this is normal. You do not need to change the filter.

Note: You can also wash your aluminum filters in the dishwasher.

### Removal of Aluminum Filters

1. Push the aluminum filter pillar forward.
2. Then gently lower it down and pull it to the front. Otherwise you can tilt the filter. Re-install the aluminum filter into the receptacle by reversing the above steps.

## **6 Your contribution to protecting the environment**

### **Disposal of Old Product**

Discard the old product so as not to damage the environment. Ask your dealer or your municipal garbage collection center about how to dispose of the product. Cut off the power plug for children's safety and put your product out of operation before throwing away the product.

### **Disposal of Packaging**

Packaging materials are dangerous for children. Keep packaging materials out of the reach of children. The product's packaging is made from recycled material. Garbage by sorting according to the waste instructions. Do not throw away with normal household garbage.