

USER MANUAL



Scan Code For Warranty
Registration & Policy

Product Name: 2 ZONES INDUCTION HOB HC-I73245B

Product Applied: 536.61.727

2 ZONES INDUCTION HOB

Model: HC-I73245B



Thank you for choosing this induction hob.

This instruction manual is designed to provide you with all required instructions related to the installation, use and maintenance of the appliance.

In order to operate the unit correctly and safely, please read this instruction manual carefully before installation and usage.

Safety precaution

Statement: Because the product update constantly, the following function is not necessarily for every product, it's depend on the detail model.

First. Product feature - this product heating by the inside coil, and through the panel to heat the pan.

- Environmental protection: non-toxic, no pollution, no electromagnetic radiation
- Heat fast: Based on the principle of electromagnetic induction, the bottom is heated directly, which due to a high thermal efficiency, and fast speed.
- Use the high hardness and high temperature resistant crystal plate, can easy to clean, also durable to use.
- Microcomputer control, the fire temperature control at will safe use, it has many function protect, like overvoltage, under voltage, over temperature and fan delay working.

Second. Notice

- The plate is hot after using, please do not touch with your hand.
- Please do not put the machine in water to clean
- If the power cord be damaged, please replace it in the special store and please use the special cord.
- Please keep away from the children to use
- It must be have someone take care of this during using.
- Please don't put paper, towels and other flammable items in the furnace heating surface, in case of causing a fire.
- Please use special socket that more that 25A
- Please don't let children or unconscious ability people to use
- Please do not insert the wire items to the wind and air outlet, in case of causing electric shock
- Please do not heat sealed apparatus, in order to avoid explosion.
- Please do not use if the plate broken until fix it.
- Every time you finish, the fan keeps working to dissipate the heat , only when the fan stop working, can unplug the power cord
- Please do not use the pot that the bottom distort, in case of the plate heating unevenness lead to broken
- Household and Indoor use only.
- When the appliance is not in use and before cleaning, unplug the appliance from the outlet firstly.

- To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid.
- The appliance is only intended for the purpose described in user manual.
- Do not use appliance or any part of the appliance out of the intended use to avoid risk.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- The appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- Cleaninand user maintenance shall not be made by children without supervision. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons order to avoid a hazard.
- If symbol IEC 60417-5041(2002-10) is marked on appliances, its meaning shall be explained. The instructions shall state that appliances are not intended to be operated by means of an external timer or separate.
- Remote-control system.

WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock. Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.

- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments

Correct Diposal of this product




The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead, it shall be taken to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling this product, please contact your local city office, your household waste disposal service or the shop where the product was purchased.

Installation

Selection of Installation Equipment


Cut out the work surface according to the sizes shown in the drawing. For the purpose of installation and use, a minimum of 50mm space shall be preserved around the hole.

Be sure the thickness of the work surface is at least 30mm. Please select heat-resistant work surface material to avoid larger deformation caused by the heat radiation from the hotplate. As shown below:

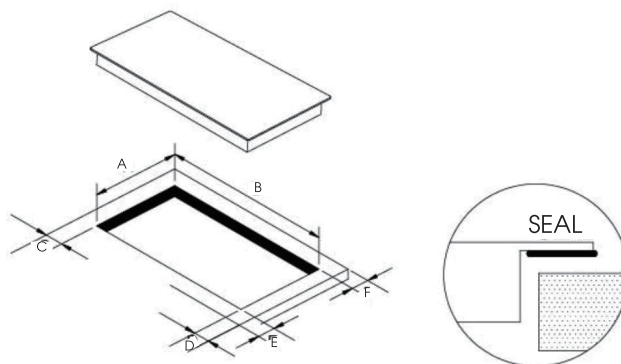

A	B	C	D	E	F
380mm mini	680mm mini	110mm mini	110mm mini	50mm mini	50mm mini

The hob can be used on the table top of cabinet. The ceramic hob should be placed horizontally. As shown below:

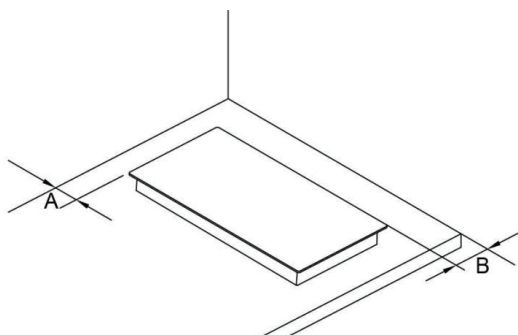


A	B
50mm mini	50mm mini

⚠ Under any circumstances, make sure the hob is well ventilated and the air inlet and outlet are not blocked. Ensure the hob is in good work state. As shown below

NOTE

The safety distance between the hotplate and the cupboard above the hotplate should be at least 760mm.

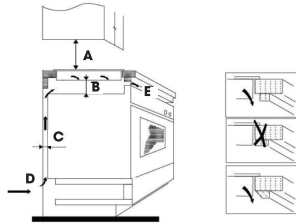

A	B	C	D	E
760mm mini	110mm mini	30mm mini	Air intake	Air exit 10 mm

Cautions

1. The hob must be installed by qualified personnel or technicians. We have professionals at your service. Please never conduct the operation by yourself.
2. The hob shall not be mounted to cooling equipment, dishwashers and rotary dryers.
3. The hob shall be installed such that better heat radiation can be ensured to enhance its reliability.
4. The wall and induced heating zone above the work surface shall withstand heat.
5. To avoid any damage, the sandwich layer and adhesive must be resistant to heat.
6. A steam cleaner is not to be used.

Connection the hob to the mains power supply

The power supply should be connected in compliance with the relevant standard, or a single-pole circuit breaker.

1. If the cable is damaged or needs replacing, this should be done by an after-sales technician using the proper tools, so as to avoid any accidents.
2. The installer must ensure that the correct electrical connection has been made and that it complies with safety regulations.
3. The cable must not be bent or compressed.
4. The cable must be checked regularly and only replaced by a properly qualified person.

Technical Specifications

Rated Voltage	220-240V~
Rated Frequency	50/60Hz
Rated Power	Total power 4600W

Operation panel



Suitable Cookware

Magnetic cookware (stainless steel, magnetic stainless steel, cast iron), Flat-bottomed cookware, Base diameter: $\geq 12\text{ cm}$ and $\leq 24\text{ cm}$.

a  Iron saucepan	b  Iron milkpan
c  Iron frying pan	d  Iron kettle
e  Iron frier	f  Iron steamer

Unsuitable Cookware

Cookware made of aluminum, copper, glass, or ceramic, Cookware with a base diameter of less than 12 cm or greater than/equal to 24 cm.

 Pot with feet	 Ceramic pot	 The bottom diameter is more than 24cm	
 Curved-bottom pot	 Glass pot	 Pot of diameter below 10cm	 Aluminum pot

Operating Instructions

The product features overflow protection - when water is detected on the cooking zone, the zone will automatically shut down to prevent malfunction caused by liquid overflow.

1. Connect the power cord to a dedicated power outlet. Turn on the power switch. The unit will emit a beep, and all indicators will light up for 1 second before turning off - the appliance then enters standby mode (power-on standby)..
2. In standby mode, press the On/Off button to enter “**ON**” mode.
Within 60 seconds, press any power level button or the Keep Warm button to activate the corresponding cooking zone. Otherwise, the appliance will return to standby mode.

Button Instructions

Button	Button Instructions
On/Off	Press the On/Off button when the appliance is off to enter standby mode. Press the On/Off button when the appliance is on to turn it off
Pause	Press the Pause button during operation to pause or resume the cooking zone.
Boost	During heating, press the Booster button to activate or deactivate the booster function
Power Level Buttons (1-9)	In standby or keep-warm mode, press any power level button to start heating at the selected level. During heating, press a power level button to switch between power levels. Each button corresponds to a specific level and supports slide control.

Keep Warm	In standby mode (when keep-warm is not active), press the Keep Warm button to activate the keep-warm function. While keep-warm is active, press the Keep Warm button again to switch between keep-warm temperature levels.
Timer	During operation, press the Timer button briefly to enter timer setting mode. In timer setting mode, press the timer increase/decrease button to adjust the timer duration.
Child Lock	Press and hold the Child Lock button for 2 seconds to lock or unlock the control panel.

Function Instructions

Button	Function Descriptions
Heating Function	• In standby or keep-warm mode, press any power level button to activate the heating function. • There are 9 adjustable power levels (19). Press the power level button to adjust the power level (slide adjustment is also available). • During heating, press the Booster button to activate the booster function. The cooking zone will operate at maximum power output and automatically return to the original power level after 5 minutes. • During Boost mode, press the boost button again or any power level button to return to the original power level or the corresponding selected level. • During Heating mode, press any power level button or the timer increase/decrease button to enter the auto shut-off timer. Then press the timer increase/decrease button to adjust the time within a setting range of "00-99". • During cooking mode, press the keep warm button to switch to keep warm mode.
Keep-Warm Function	• Press the Keep-Warm button to activate keep-warm mode. The cooking zone will enter keep warm mode level 1. • There are 3 adjustable keep-warm temperature levels: 45°C - 65°C - 85°C. Press the Keep Warm button again to cycle through the levels During keep-warm mode: • The Booster button is inactive. • Press the keep warm button or the timer increase/decrease button to set the auto shut-off timer (01-99 minutes). Press the timer increase/decrease button to adjust the time within a setting range of "00-99". • While in keep-warm mode, press a power level button to switch to cooking mode.

Booster Function	• While in heating mode, press the Booster button once to activate the booster function. The hob will operate at maximum power output. The power level display will show “P” • After 5 minutes of booster operation, the hob will automatically return to the previously set power level. • To manually exit booster mode, press any power level button, press the Booster button again, or switch to another function.
Timer Function	During operation, press the timer increase/decrease button, a power level button, or the Keep-Warm button to the auto shut-off timer mode for the corresponding function. The display will show “00” or the remaining operating time. Within 5 seconds, use: • Level 9 button to increase the time • Level 1 button to decrease the time • Short press: Adjust by 1 minute per press • Long press: Continuously adjust in 1-minute increments • Timer range: 01 to 99 minutes (adjustable in a loop). • If no operation is performed for 5 seconds, the timer setting is confirmed and the countdown begins. • When the countdown reaches 00, the hob will automatically shut off. During Timer mode, press the timer increase/decrease button again, a power level button (in heating mode), or the Keep-Warm button (in keep warm mode) to readjust the time based on the remaining time. Setting the time to “00” or switching functions will cancel the auto shut-off timer.
Child Lock Function	• During operation, press and hold the Child Lock button for 2 seconds to activate child lock mode. • When child lock is active, timer display shows “LO”, and only the following operations are allowed: • Press and hold the Child Lock button for 2 seconds to unlock • Short press the On/Off button to turn off the appliance • All other buttons are disabled. • In off state, press and hold the Child Lock button for 2 seconds to activate child lock mode. In this state, only long press the Child Lock button to unlock - all other buttons are disabled.
Pause Function	• During operation, press the pause button. The display will show “Stop” and the cooking zone will enter pause mode. Press the pause button again within 60 seconds to cancel pause and resume operation; otherwise, the appliance will automatically shut off after 60 seconds.
Overflow Protection Function	• During operation, if water is detected covering 3 or more touch buttons on the glass panel, the appliance will automatically shut off after approximately 10 seconds and emit 3 beeps to prevent malfunction.

Daily Maintenance and Care

To ensure optimal performance and a pleasant user experience, please keep the glass panel surface clean at all times.

- If the surface becomes dirty, clean it with a soft cloth dampened with a mild detergent.
- Do not use hard or sharp objects to clean the glass surface, as they may cause scratches or damage.
- Ensure that the built-in cabinet has good ventilation and heat dissipation to maintain safe and efficient operation.

Troubleshooting Guide

Problem	Possible Cause/Analysis	Solution
Unit does not power on	Power cord not properly connected	Check and reconnect
	Socket or wiring damaged	Check and replace if needed
	No power supply in the household	Check home power supply
	Main PCB board malfunction	Contact service center for repair
Cannot be turned on after power-up	Water on control panel	Wipe dry before use
	Display board malfunction	Contact service center for repair
Unit stops heating suddenly during use	Ambient temperature too high	Move to a cooler environment
	Air inlet or outlet blocked	Remove blockage and ensure proper ventilation
	Timer function activated	Normal operation - unit shuts off when timer ends
	No operation for over 2 hours	Normal auto shut-off after 2 hours of inactivity
	Main PCB board malfunction	Contact service center for repair
Unit turns on but does not heat	Main PCB board damaged	Contact service center for repair
	Heating zone temperature too high	Allow unit to cool down before restarting
	No cookware or unsuitable cookware on left zone	Use appropriate cookware

Error Code

Code	Description
U	No cookware or unsuitable cookware detected
E1	Overvoltage protection
E2	Undervoltage protection
E3	Cooking zone overheat protection
E5	IGBT overheat protection
F3	IGBT sensor open circuit
F4	IGBT sensor short circuit
F5	Cooking zone sensor open circuit
F9	Cooking zone sensor short circuit
FA	Cooking zone sensor failure
FC	Light board communication error

Standby Display

Code	Description
H	Glass panel temperature is high - Do not touch

HƯỚNG DẪN SỬ DỤNG

Vietnamese



Quét mã để đăng ký bảo hành &
Chính sách bảo hành

Tên sản phẩm: BẾP TỪ 2 VÙNG NẤU HC-I73245B

Mã sản phẩm: 536.61.727

BẾP TỪ 2 VÙNG NẤU

Model: HC-I73245B



Cảm ơn Quý khách đã lựa chọn bếp từ này.

Hướng dẫn sử dụng này được thiết kế để cung cấp cho Quý khách tất cả các hướng dẫn cần thiết liên quan đến việc lắp đặt, sử dụng và bảo trì thiết bị.

Để vận hành thiết bị đúng cách và an toàn, vui lòng đọc kỹ hướng dẫn sử dụng này trước khi lắp đặt và sử dụng.

Hướng dẫn an toàn

Tuyên bố: Do sản phẩm được cập nhật liên tục, các chức năng dưới đây có thể không áp dụng cho mọi sản phẩm; tùy thuộc vào từng model cụ thể.

Đặc điểm sản phẩm: Sản phẩm này gia nhiệt bằng cuộn dây bên trong, truyền nhiệt qua mặt kính để làm nóng dụng cụ nấu.

- Bảo vệ môi trường: Không độc hại, không gây ô nhiễm, không phát bức xạ điện từ.
- Gia nhiệt nhanh: Dựa trên nguyên lý cảm ứng điện từ, đáy nồi được làm nóng trực tiếp, hiệu suất nhiệt cao và tốc độ gia nhiệt nhanh.
- Sử dụng mặt kính dạng tinh thể chịu nhiệt, độ cứng cao, dễ vệ sinh và bền bỉ khi sử dụng.
- Điều khiển bằng bộ vi xử lý, có thể tùy chỉnh mức công suất/nhiệt độ linh hoạt.
- An toàn khi sử dụng: Có nhiều chức năng bảo vệ như quá áp, thấp áp, quá nhiệt và quạt tản nhiệt chạy trễ.

Lưu ý:

- Mặt bếp vẫn nóng sau khi sử dụng, không chạm tay trực tiếp vào bề mặt.
- Không nhúng thiết bị vào nước để vệ sinh.
- Nếu dây nguồn bị hỏng, vui lòng thay thế tại cửa hàng chuyên dụng và sử dụng đúng loại dây chuyên dụng.
- Để xa tầm tay trẻ em khi sử dụng.
- Luôn có người giám sát trong quá trình sử dụng.
- Không đặt giấy, khăn hoặc các vật dễ cháy lên bề mặt gia nhiệt để tránh nguy cơ cháy.
- Sử dụng ổ cắm chuyên dụng có dòng định mức trên 25A.
- Không để trẻ em hoặc người không có đủ năng lực nhận thức sử dụng thiết bị.
- Không đưa vật kim loại hoặc dây dẫn vào khe thông gió/thoát khí để tránh nguy cơ điện giật.
- Không đun nóng các vật chứa kín để tránh nguy cơ nổ.
- Không sử dụng nếu mặt kính bị nứt vỡ cho đến khi được sửa chữa.
- Sau mỗi lần sử dụng, quạt vẫn tiếp tục hoạt động để tản nhiệt; chỉ rút nguồn khi quạt đã dừng hẳn.
- Không sử dụng nồi có đáy bị biến dạng để tránh gia nhiệt không đều gây nứt vỡ mặt kính.
- Chỉ sử dụng trong gia đình và trong nhà.
- Khi không sử dụng hoặc trước khi vệ sinh, phải rút phích cắm khỏi ổ điện.
- Để tránh nguy cơ điện giật, không nhúng thiết bị, dây nguồn hoặc phích cắm vào nước hoặc chất lỏng khác.

- Thiết bị chỉ được sử dụng cho mục đích mô tả trong Hướng dẫn này.
- Không sử dụng thiết bị hoặc bất kỳ bộ phận nào sai mục đích để tránh rủi ro.
- Thiết bị không được thiết kế cho những người (bao gồm trẻ em) có hạn chế về thể chất, cảm giác hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức, trừ khi được giám sát hoặc hướng dẫn bởi người chịu trách nhiệm về an toàn.
- Phải sử dụng thiết bị một cách an toàn và hiểu rõ các nguy cơ liên quan. Trẻ em không được chơi đùa với thiết bị.
- Việc vệ sinh và bảo dưỡng không được thực hiện bởi trẻ em nếu không có sự giám sát. Nếu dây nguồn bị hỏng, dây nguồn phải được thay thế bởi nhà sản xuất, đại lý dịch vụ hoặc người có chuyên môn tương đương để tránh nguy hiểm.
- Nếu thiết bị có ký hiệu IEC 60417-5041 (2002-10), ý nghĩa của ký hiệu sẽ được giải thích cụ thể. Không điều khiển thiết bị không bằng bộ hẹn giờ bên ngoài hoặc hệ thống điều khiển từ xa riêng biệt.
- **CẢNH BÁO:** Nếu bề mặt bị nứt, hãy tắt thiết bị để tránh nguy cơ điện giật. Không đặt các vật kim loại như dao, nĩa, thìa, nắp lên mặt bếp vì chúng có thể bị nóng lên.
- Thiết bị chỉ được thiết kế để sử dụng trong gia đình và các môi trường tương tự như:
 - Khu vực bếp dành cho nhân viên trong cửa hàng, văn phòng và các môi trường làm việc khác;
 - Nhà ở nông trại;
 - Khách sử dụng trong khách sạn, nhà nghỉ và các môi trường lưu trú tương tự;
 - Môi trường dạng nhà nghỉ có phục vụ ăn sáng.

Hướng dẫn thải bỏ đúng cách sản phẩm



Biểu tượng trên sản phẩm hoặc bao bì cho biết sản phẩm này không được xử lý như rác thải sinh hoạt thông thường. Thay vào đó, sản phẩm cần được chuyển đến các điểm thu gom phù hợp để tái chế thiết bị điện và điện tử. Việc xử lý đúng cách sẽ góp phần ngăn ngừa các tác động tiêu cực tiềm tàng đối với môi trường và sức khỏe con người do xử lý rác thải không đúng quy trình. Để biết thêm thông tin chi tiết về cách tái chế sản phẩm này, hãy liên hệ với cơ quan chức năng địa phương, dịch vụ quản lý rác thải, hoặc nơi bạn đã mua sản phẩm.

Lắp đặt


Lựa chọn thiết bị lắp đặt

Cắt bề mặt bếp theo các kích thước trong bản vẽ.

Để lắp đặt và sử dụng, phải để lại khoảng trống tối thiểu 50mm xung quanh lỗ cắt.


Đảm bảo độ dày của bề mặt bếp ít nhất là 30mm. Vui lòng chọn vật liệu chịu nhiệt cho bề mặt bếp để tránh bị biến dạng quá nhiều do mặt bếp tỏa nhiệt.

Dưới đây là hình minh họa:

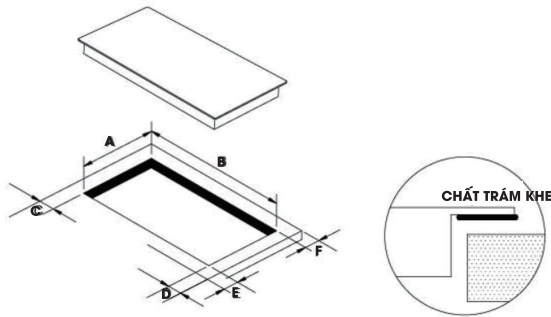

A	B	C	D	E	F
Tối thiểu 380mm	Tối thiểu 680mm	Tối thiểu 110mm	Tối thiểu 110mm	Tối thiểu 50mm	Tối thiểu 50mm

Có thể lắp đặt bếp từ trên mặt tủ bếp. Đặt bếp điện gồm nằm ngang. Dưới đây là hình minh họa:

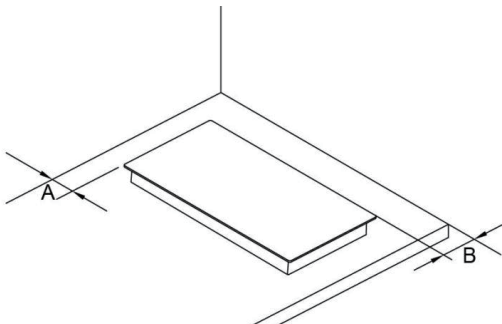


A	B
Tối thiểu 50mm	Tối thiểu 50mm

⚠ Hãy đảm bảo bếp thông gió tốt, lỗ hút khí và lỗ thoát khí không bị chặn trong mọi trường hợp. Đảm bảo bếp trong trạng thái hoạt động tốt. Dưới đây là hình minh họa

LƯU Ý

Khoảng cách an toàn tối thiểu giữa một bếp và tủ bếp phía trên là 760mm.

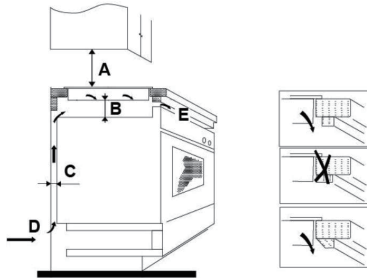

A	B	C	D	E
Tối thiểu 760mm	Tối thiểu 110mm	Tối thiểu 30mm	Lỗ hút khí	Lỗ thoát khí 10 mm

Thận trọng

Bếp từ phải do nhân viên hoặc kỹ thuật viên đủ trình độ lắp đặt. Chúng tôi có các chuyên gia sẵn sàng giúp đỡ bạn. Vui lòng không được tự ý lắp đặt.

1. Không được gắn bếp từ với thiết bị làm mát, máy rửa bát và máy sấy thùng quay.
2. Phải lắp đặt bếp từ sao cho đảm bảo khả năng tỏa nhiệt tốt để bếp từ hoạt động an toàn.
3. Tường và khu vực chịu nhiệt từ phía trên bề mặt bếp phải chịu được nhiệt.
4. Để tránh hư hỏng, bề mặt bếp và keo dính phải chịu được nhiệt.
5. Không được sử dụng máy làm sạch bằng hơi nước.

Kết nối bếp từ với nguồn điện chính

Phải kết nối nguồn điện theo tiêu chuẩn liên quan hoặc cầu dao một cực.

1. Nếu dây điện bị hỏng hoặc cần thay thế thì việc sửa/thay dây điện phải do kỹ thuật viên thực hiện với các công cụ thích hợp để tránh tai nạn.
2. Người lắp đặt phải đảm bảo rằng thiết bị điện được kết nối chính xác và tuân thủ các quy định an toàn.
3. Không được uốn cong hoặc chèn ép dây điện.
4. Phải kiểm tra dây điện thường xuyên và việc thay dây điện phải do người đủ chuyên môn thực hiện.

Technical Specifications

Điện áp định mức	220-240V~
Tần số định mức	50/60Hz
Công suất định mức	Tổng công suất 4600W

Bảng điều khiển



Dụng cụ nấu phù hợp

Dụng cụ nấu có tính từ (thép không gỉ, thép không gỉ nhiễm từ, gang).

Dụng cụ có đáy phẳng: Đường kính đáy: ≥ 12 cm và ≤ 24 cm

a Nồi sắt	b Nồi nấu đồ ăn dặm
c Chảo sắt	d Ấm đun nước bằng sắt
e Nồi chiên bằng sắt	f Nồi hấp bằng sắt

Dụng cụ nấu không phù hợp

Dụng cụ bằng nhôm, đồng, thủy tinh hoặc gốm. Dụng cụ có đường kính đáy dưới 12 cm hoặc bằng hoặc hơn 24 cm.

 Nồi có chân	 Nồi gốm	 Đường kính đáy lớn hơn 24cm	
 Đáy cong	 Loại nồi thủy tinh	 Đường kính đáy nhỏ hơn 10cm	 Ấm nhôm

Hướng dẫn sử dụng

Sản phẩm được trang bị chức năng bảo vệ chống tràn - khi phát hiện có nước trên vùng nấu, bếp sẽ tự động tắt để tránh sự cố do chất lỏng tràn gây ra.

- Cắm dây nguồn vào ổ điện chuyên dụng. Bật công tắc nguồn. Thiết bị sẽ phát ra tiếng “bíp”, tất cả đèn báo sáng trong 1 giây rồi tắt - lúc này thiết bị chuyển sang chế độ chờ (Standby).
- Ở chế độ chờ, nhấn nút On/Off để chuyển sang chế độ **“ON”**.
Trong vòng 60 giây, nhấn bất kỳ nút mức công suất hoặc nút “Giữ ấm” (Warm) để kích hoạt vùng nấu tương ứng. Nếu không, thiết bị sẽ quay lại chế độ chờ.

Hướng dẫn các nút chức năng

Nút	Chức năng
On/Off (Bật/Tắt)	Nhấn khi thiết bị đang tắt để vào chế độ chờ. Nhấn khi thiết bị đang hoạt động để tắt thiết bị
Pause (Tạm dừng)	Nhấn khi hoạt động để tạm dừng hoặc tiếp tục nấu.
Boost (Gia nhiệt nhanh)	Ở chế độ chờ hoặc giữ ấm: Nhấn bất kỳ nút nào để kích hoạt mức công suất tương ứng và vào trạng thái cài đặt trước. Trong chế độ công suất: Nhấn các nút để chuyển đổi giữa các mức công suất. Mỗi nút tương ứng với một mức cụ thể và hỗ trợ điều khiển trượt.

Keep Warm (Giữ ấm)	Ở chế độ chờ (khi chức năng giữ ấm không hoạt động): Nhấn nút Giữ ấm để kích hoạt chức năng giữ ấm. Trong khi chức năng giữ ấm đang hoạt động: Nhấn nút Giữ ấm một lần nữa để chuyển đổi giữa các mức nhiệt giữ ấm.
Timer (Hẹn giờ)	Trong khi hoạt động, nhấn nhanh nút Hẹn giờ để vào chế độ cài đặt hẹn giờ. Ở chế độ cài đặt hẹn giờ, nhấn nút tăng/giảm thời gian để điều chỉnh thời gian hẹn giờ.
Child Lock (Khóa trẻ em)	Nhấn và giữ trong 2 giây để khóa hoặc mở khóa bảng điều khiển.

Hướng dẫn các nút chức năng

Nút	Chức năng
Chức năng Gia nhiệt (Heating Function)	• Ở chế độ chờ hoặc giữ ấm, nhấn bất kỳ nút mức công suất nào để kích hoạt chức năng gia nhiệt. • Có 9 mức công suất điều chỉnh (1-9). Nhấn nút mức công suất để điều chỉnh (có thể điều chỉnh bằng thanh trượt). • Trong quá trình gia nhiệt, nhấn nút Boost để kích hoạt chức năng tăng cường. Vùng nấu sẽ hoạt động ở công suất tối đa và tự động trở về mức công suất ban đầu sau 5 phút. • Trong chế độ Boost, nhấn lại nút Boost hoặc bất kỳ nút mức công suất nào để quay về mức công suất ban đầu hoặc mức đã chọn. • Trong chế độ gia nhiệt, nhấn nút mức công suất bất kỳ hoặc nút tăng/giảm hẹn giờ để vào chế độ hẹn giờ tắt tự động. Sau đó nhấn nút tăng/giảm hẹn giờ để điều chỉnh thời gian trong khoảng "0099" phút. • Trong quá trình nấu, nhấn nút Keep Warm để chuyển sang chế độ giữ ấm.
Chức năng Giữ ấm (Keep Warm Function)	• Nhấn nút Keep Warm để kích hoạt chế độ giữ ấm. Vùng nấu sẽ vào mức giữ ấm cấp 1. • Có 3 mức nhiệt giữ ấm: 45°C - 65°C - 85°C. Nhấn lại nút Keep Warm để chuyển đổi giữa các mức. Trong chế độ giữ ấm: • Nút Boost không hoạt động • Nhấn nút Keep Warm hoặc nút tăng/giảm hẹn giờ để cài đặt thời gian tự động tắt (01-99 phút). Sau đó nhấn nút tăng/giảm hẹn giờ để điều chỉnh trong khoảng 00-99 phút • Trong chế độ giữ ấm, nhấn nút mức công suất bất kỳ để chuyển sang chế độ nấu.

Chức năng Tăng cường (Booster Function)	• Trong chế độ gia nhiệt, nhấn nút Boost một lần để kích hoạt chức năng tăng cường. Bếp sẽ hoạt động ở công suất tối đa, màn hình hiển thị "P". • Sau 5 phút, bếp sẽ tự động trở về mức công suất đã cài đặt trước đó. • Để thoát thủ công khỏi chế độ Boost: nhấn bất kỳ nút mức công suất, nhấn lại nút Boost hoặc chuyển sang chức năng khác.
Chức năng Hẹn giờ (Timer Function)	Trong quá trình hoạt động, nhấn nút tăng/giảm hẹn giờ, nút mức công suất hoặc nút Giữ ấm để vào chế độ hẹn giờ tắt tự động tương ứng. Màn hình hiển thị "00" hoặc thời gian còn lại. Trong vòng 5 giây, sử dụng: • Nút mức 9 để tăng thời gian • Nút mức 1 để giảm thời gian • Nhấn ngắn: tăng/giảm 1 phút/lần • Nhấn giữ: điều chỉnh liên tục theo bước 1 phút • Phạm vi hẹn giờ: 01-99 phút (dạng lặp) • Nếu không thao tác trong 5 giây, cài đặt được xác nhận và bắt đầu đếm ngược • Khi về "00", bếp sẽ tự động tắt Trong chế độ hẹn giờ, nhấn lại nút tăng/giảm hẹn giờ, nút mức công suất (ở chế độ gia nhiệt) hoặc nút Giữ ấm (ở chế độ giữ ấm) để điều chỉnh lại thời gian theo thời gian còn lại. Nếu đặt về "00" hoặc chuyển chức năng khác, hẹn giờ sẽ bị hủy.
Chức năng Khóa trẻ em (Child Lock Function)	• Trong khi hoạt động, nhấn và giữ nút Child Lock trong 2 giây để kích hoạt chế độ khóa trẻ em. Khi khóa được kích hoạt, màn hình hiển thị "LO", chỉ cho phép các thao tác: • Nhấn và giữ nút Child Lock trong 2 giây để mở khóa • Nhấn nhanh nút On/Off để tắt thiết bị • Tất cả các nút khác sẽ bị vô hiệu hóa. • Khi thiết bị đang tắt, nhấn và giữ nút Child Lock trong 2 giây để kích hoạt khóa. Trong trạng thái này, chỉ có thể nhấn giữ nút Child Lock để mở khóa, các nút khác đều không hoạt động.
Chức năng Tạm dừng (Pause Function)	• Trong quá trình hoạt động, nhấn nút Pause. Màn hình hiển thị "Stop" và vùng nấu chuyển sang chế độ tạm dừng. Nhấn lại nút Pause trong vòng 60 giây để hủy tạm dừng và tiếp tục hoạt động; nếu không, thiết bị sẽ tự động tắt sau 60 giây.
Chức năng Bảo vệ tràn (Overflow Protection Function)	• Trong quá trình hoạt động, nếu phát hiện nước che phủ từ 3 nút cảm ứng trở lên trên mặt kính, thiết bị sẽ tự động tắt sau khoảng 10 giây và phát ra 3 tiếng bíp để tránh sự cố.

Bảo dưỡng và vệ sinh hàng ngày

Để đảm bảo hiệu suất tối ưu và trải nghiệm sử dụng tốt, vui lòng luôn giữ bề mặt kính sạch sẽ.

- Nếu bề mặt bị bẩn, hãy lau bằng khăn mềm thấm chất tẩy rửa nhẹ.
- Không sử dụng vật cứng hoặc sắc nhọn để vệ sinh mặt kính, vì có thể gây trầy xước hoặc hư hỏng.
- Đảm bảo tủ bếp lắp đặt có hệ thống thông gió và tản nhiệt tốt để duy trì hoạt động an toàn và hiệu quả.

Hướng dẫn xử lý sự cố

Sự cố	Nguyên nhân	Giải pháp
Thiết bị không khởi động	Dây nguồn chưa kết nối đúng	Kiểm tra và cắm lại
	Ổ cắm hoặc dây điện bị hỏng	Kiểm tra và thay thế nếu cần
	Không có điện trong nhà	Kiểm tra nguồn điện gia đình
	Bo mạch chính (PCB) bị lỗi	Liên hệ trung tâm bảo hành để sửa chữa
Không thể bật sau khi cấp nguồn	Có nước trên bảng điều khiển	Lau khô trước khi sử dụng
	Bo mạch hiển thị bị lỗi	Liên hệ trung tâm bảo hành để sửa chữa
Bếp ngừng gia nhiệt đột ngột khi đang sử dụng	Nhiệt độ môi trường quá cao	Di chuyển thiết bị đến nơi mát hơn
	Lỗ hút/xả gió bị tắc	Loại bỏ vật cản, đảm bảo thông gió
	Chức năng hẹn giờ đã kích hoạt	Hoạt động bình thường - bếp tắt khi hết thời gian
	Không thao tác trong hơn 2 giờ	Tự động tắt sau 2 giờ không hoạt động
Thiết bị bật nhưng không gia nhiệt	Bo mạch chính (PCB) bị lỗi	Liên hệ trung tâm bảo hành để sửa chữa
	Bo mạch chính bị hỏng	Liên hệ trung tâm bảo hành để sửa chữa
	Nhiệt độ vùng nấu quá cao	Đợi thiết bị nguội rồi khởi động lại
	Không có nồi hoặc nồi không phù hợp ở vùng nấu bên trái	Sử dụng dụng cụ nấu phù hợp

Mã lỗi

Mã	Mô tả
U	Không có nổi hoặc nổi không phù hợp
E1	Bảo vệ quá áp
E2	Bảo vệ thấp áp
E3	Bảo vệ quá nhiệt vùng nấu
E5	Bảo vệ quá nhiệt IGBT
F3	Cảm biến IGBT hở mạch
F4	Cảm biến IGBT ngắn mạch
F5	Cảm biến vùng nấu hở mạch
F9	Cảm biến vùng nấu ngắn mạch
FA	Lỗi cảm biến vùng nấu
FC	Lỗi giao tiếp màn hình hiển thị

Màn hình chờ

Mã	Mô tả
H	Nhiệt độ mặt kính còn cao - Không chạm vào

HÄFELE

Häfele VN LLC.

Phone: (+84 28) 39 113 113

Email: info@hafele.com.vn

