

User manual



Scan Code For Warranty
Registration & Policy

Product Name: Portable Blender HS-B153TX

Product Applied: 535.43.292

Table Blender

Model HS-B153TX




**Read this booklet thoroughly before using and
save it for future reference**

✓ PRODUCT COMPONENTS



1	Measuring Cup
2	Glass Jar Lid
3	Glass Jar
4	Blade
5	Glass Jar Base
6	Main Body
7	Control Panel
8	Rubber Feet
9	Grinder Bowl Lid
10	Grinder Bowl

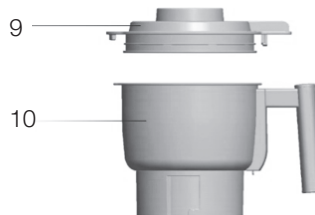

✓ IMPORTANT SAFETY PRECAUTIONS



When using the electric appliance, please always follow the basic safety precaution, in order to reduce the risk of fire, electric shock, and/or personal injury.

Please kindly follow the safety warnings below:

 Warning:

1. Please read all the instructions carefully.
2. Do not place the power cord, plug or appliance into water or any other liquid, to prevent electric shock.
3. Close supervision is necessary when the appliance is used by child, or used near child.
4. This appliance is not intended to be used by people (including child) with reduced physical, sensory or mental capabilities, or those lack of experience and knowledge, unless the appliance use instructions have been given by a person responsible for their safety.
5. Unplug from the socket when you do not use the appliance, as well as before cleaning.
6. If the appliance has electric failure, or is damaged in any way, please do not use the appliance with a damaged power cord or plug.
7. It might cause malfunction if using accessories not recommended by manufacturer.
8. Please do not use the appliance outdoor.
9. Please do not hang the power cord over the edge of table or counter, or contact with hot surface.
10. Please do not place the appliance on or near a hot gas or electric burner, or in a heated oven.
11. This appliance is only for domestic use. Manufacturer does not assume any responsibility caused by any commercial use, inappropriate use, or failure in complying instructions, and this warranty is no longer valid.
12. Please do not use the appliance if any part is damaged.
13. Please make sure the jar lid is securely locked in place before using the appliance.
14. Never put any ingredient into the plastic jar with hand, when the appliance is operated.
15. As the cutting blade is sharp, please use it with caution. Store the blade out of the reach of child.
16. Please only use the appliance with the suitable original accessories and spare parts for your safety.
17. Never remove the jar lid until the cutting blade stops completely.
18. As this appliance is designed to process small quantity, please do not exceed the quantity indicated in the manual.
19. Please do not use the appliance for glutinous rice or other sticky substance.
20. Please do not use the appliance for other unexpected intention.
21. For your safety, please use the appliance in compliance with equipment standard, regulation, and directives for low voltage, electromagnetic compatibility, environment, etc. Please keep this instruction.

Please kindly follow the safety warnings below:



INSTALLATION & OPERATION

Notes:

- Clean all the components before using the appliance for the first time.
- When the appliance is powered on, the indicating light is up and the flashing 'E1' will be showed on the panel.
- After installing the plastic jar, all the preset function logos are lighted up permanently, including following functions:
 *Manual *Juicer *Ice Crushing *Smoothie *Pulse
- 10 level speeds are available in manual function, which can be chosen according to different kinds of food and fruits.
- The working capacity is 1.5L for this glass jar.


Operation Procedure:

With Glass Jar


1. Pour the ingredients into the plastic jar, and cover it with the lid tightly (Fig. 1).
2. Install the plastic jar to the main body (Fig. 2), and turn it clockwise to lock up (Fig.3). Lift up the plastic jar to check if it is locked tightly.
3. Plug in the appliance, and choose the suitable function to work on the panel.
4. The appliance will automatically stop after blending. Unplug the appliance, and wait until the blade completely stop.
5. Remove the plastic jar by turning it counter clockwise, take off the jar lid, and pour out the ingredients at the end.



(Fig. 1)

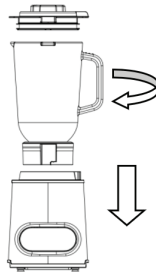


(Fig. 2)

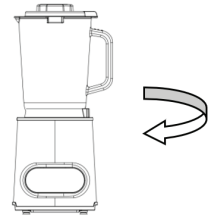

(Fig. 3)

With Grinder Bowl

1. Pour the ingredients into the grinder bowl, and cover it with the lid tightly.
2. Install the grinder bowl to the main body, and turn it clockwise to lock up. Lift up the grinder bowl to check if it is locked tightly.
3. Plug in the appliance, and choose the speed as you want.
4. The appliance will automatically stop after grinding. Unplug the appliance, and wait until the blade completely stop.
5. Remove the grinder bowl by turning it counter clockwise, take off the bowl lid, and pour out the ingredients at the end.

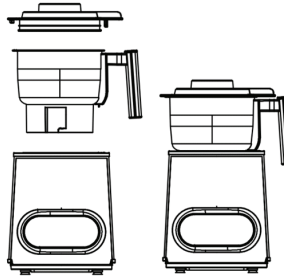

Baby Food:

To mix or blend cooked food:

- Chop the food into small pieces, add some soup with meat or vegetable, and mix with ingredients. Choose the function you need, and press 'start' on the panel.

Fruit Jam:

- Chop the fruit into small pieces, add some milk, water or juice, and mix with ingredients. Choose the function you need, and press 'start' on the panel.

⚠ CAUTION: Maximum processing time should not exceed 1 minute for continually working. The appliance will automatically stop if the working time is over 1 minute, and it's suggested to use it again after 1 minute stopping. To better protect the using lifespan of appliance, it's not recommended to use it for more than 6 times in a row. Let the appliance cool down for 45 minutes after 6 times' working in a row, otherwise the motor might be damaged.

⚠ CAUTION: Please do not use the appliance if the plastic jar is empty. When using the appliance, the liquid quantity should at least reach over the blade surface.

⚠ CAUTION: Please do not pour hot ingredients into the plastic jar. Cooling the food for few minutes before blending.

⚠ CAUTION: Please check if all the ingredients have been completely mixed, before eating the mixed food.

General:

For better blending effect, please make sure that the quantity of all the ingredients can fully cover the cutting blade before processing the solid food.

PRODUCT CARE & CLEAN

- Firstly unplug the appliance.
- Use wet sponge to clean the main body only. Please do not place the main body of appliance in water or other liquid for cleaning.

Recommended Usage Function			
Function	Usage /Ingredients	Recommended Maximum Capacity	Preset Program Time
Juicer	Cold Drinks/Cocktail	1.5L	1min
	Creamy/Milky Drinks	1.2L	
Smoothie	Firstly pour fresh fruit and liquid ingredients into the glass jar, including yogurt, milk and juice. Then add ice or frozen food, including frozen fruit, ice and ice cream.	1L	
Ice Crushing	Use frozen juice or ice to make smoothie by Ice Crushing function. The speed changing is a normal phenomenon during the crushing process.	200g(10 pieces of ice)	45s
Cleaning	Rinse the plastic jar before cleaning. For better blending effect, it's recommended to completely clean and dry the plastic jar before reassembling.	500ml Warm Water	20s



TECHNICAL SPECIFICATION

Rated Voltage Range	220 – 240 V
Rated Frequency	50/60 Hz
Rated Power	1 000W
Recommended Working Capacity	1.5L

According to CE Directive 2002/96/CE, the important information regarding the correct disposal of the appliance:

- The appliance should not be disposed as municipal waste at the end of its using lifespan.
- The appliance must be taken to a specially local authorized and differentiated waste collection center, or to a dealer who provides this service.
- The separate disposal of household appliance can avoid possible negative environmental and healthy consequences of improper disposal, and also recycle constituent materials, which will greatly save energy and resource for society. As a reminder for the separate disposal of household appliance, this product is marked with a crossed wheel bin logo.



HƯỚNG DẪN SỬ DỤNG

Vietnamese



Quét Mã Để Đăng Ký Bảo Hành &
Chính Sách Bảo Hành

Tên Sản Phẩm: Máy xay sinh tố để bàn HS-B153TX

Mã Sản Phẩm: 535.43.292


Máy xay sinh tố để bàn

Model HS-B153TX



**Đọc kỹ hướng dẫn này trước khi sử dụng và cất giữ để
tham khảo sau này**

✓ BỘ PHẬN

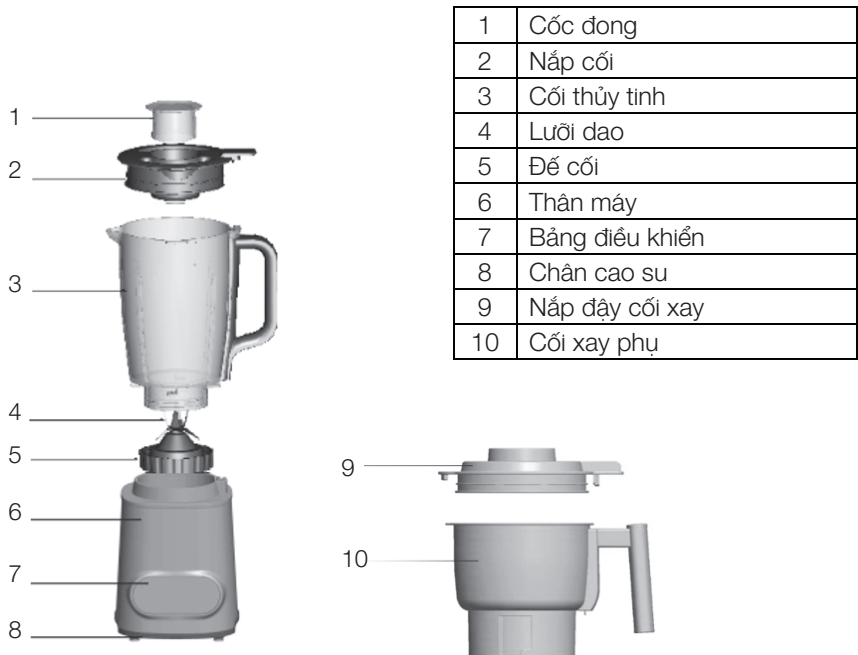

✓ CÁC BIỆN PHÁP PHÒNG NGỪA AN TOÀN QUAN TRỌNG



Khi sử dụng thiết bị điện, phải tuân thủ các biện pháp phòng ngừa an toàn cơ bản để giảm nguy cơ hỏa hoạn, điện giật và/hoặc thương tích cá nhân.

Tuân theo các cảnh báo an toàn sau đây:

 **Cảnh báo:** Vì lưới dao cực kỳ sắc bén nên hãy cẩn thận khi sử dụng.

1. Vui lòng đọc kỹ tất cả các hướng dẫn.
2. Không đặt dây nguồn, phích cắm hoặc thiết bị vào nước hoặc bất kỳ chất lỏng nào khác để tránh bị điện giật.
3. Phải giám sát chặt chẽ khi trẻ em sử dụng thiết bị hoặc sử dụng gần trẻ em.
4. Thiết bị này không được thiết kế để sử dụng bởi những người (bao gồm cả trẻ em) bị suy giảm năng lực thể chất, giác quan hoặc tâm thần hoặc những người thiếu kinh nghiệm và kiến thức, trừ khi họ được người chịu trách nhiệm an toàn hướng dẫn và giám sát sử dụng.
5. Rút phích cắm khỏi ổ cắm khi bạn không sử dụng thiết bị cũng như trước khi vệ sinh thiết bị.
6. Nếu thiết bị bị hư hỏng dây nguồn, phích cắm thì không được sử dụng thiết bị.
7. Máy có thể gặp sự cố nếu sử dụng các phụ kiện không chính hãng.
8. Không sử dụng thiết bị ngoài trời.
9. Không treo dây nguồn qua mép bàn, quầy bếp hoặc tiếp xúc với bề mặt nóng.
10. Không đặt thiết bị trên hoặc gần bếp ga hoặc bếp điện nóng hoặc trong lò nướng đã được làm nóng.
11. Thiết bị này chỉ được sử dụng trong gia đình. Nhà sản xuất không chịu bất kỳ trách nhiệm nào do việc sử dụng thương mại, sử dụng không phù hợp hoặc không tuân thủ hướng dẫn gây ra và bảo hành sẽ không có hiệu lực.
12. Không sử dụng thiết bị nếu có bất kỳ bộ phận nào bị hư hỏng.
13. Đảm bảo nắp bình được đóng chắc chắn vào đúng vị trí trước khi sử dụng thiết bị.
14. Không được cho bất kỳ thứ gì vào trong bình thủy tinh khi thiết bị đang chạy.
15. Vì lưới cắt rất sắc nên hãy cẩn thận khi sử dụng. Bảo quản lưới cắt xa tầm tay trẻ em.
16. Phải sử dụng các phụ kiện và phụ tùng chính hãng để đảm bảo an toàn.
17. Không bao giờ tháo nắp bình cho đến khi lưới cắt dừng hẳn.
18. Vì thiết bị này được thiết kế để sử dụng với lượng thực phẩm nhỏ, không sử dụng lượng thực phẩm quá lượng chỉ dẫn.
19. Không sử dụng thiết bị để xay gạo nếp hoặc chất dinh khác.
20. Không sử dụng thiết bị cho mục đích khác ngoài các mục đích được khuyến nghị.
21. Vì sự an toàn của bạn, phải tuân thủ các tiêu chuẩn, quy định và chỉ thị về thiết bị về điện áp thấp, khả năng tương thích điện từ, môi trường, v.v.

Phải giữ hướng dẫn này để sử dụng khi cần.



CÀI ĐẶT & VẬN HÀNH

Ghi chú:

- Vệ sinh tất cả các bộ phận trước khi sử dụng thiết bị lần đầu tiên.
- Khi thiết bị được bật nguồn, đèn báo sẽ sáng và chữ 'E1' nhấp nháy sẽ hiển thị trên bảng điều khiển.
- Sau khi lắp bình thủy tinh vào, tất cả các logo chức năng cài sẵn sẽ sáng lên, bao gồm các chức năng sau :

*Bằng tay *Ép trái cây *Xay đá *Sinh tố * Xay nhồi
(*Manual *Juicer *Ice Crushing *Smoothie * Pulse)

- 10 cấp tốc độ có sẵn ở chức năng bằng tay, có thể được lựa chọn theo các loại thực phẩm và trái cây khác nhau.
- Dung tích làm việc của bình thủy tinh này là 1,5L.


Quy trình sử dụng:

Với cối thủy tinh


- Đổ nguyên liệu vào bình thủy tinh và đậy kín nắp (Hình 1).
- Lắp bình thủy tinh vào thân chính (Hình 2) và xoay theo chiều kim đồng hồ để khóa lại (Hình 3). Nhấc bình thủy tinh lên để kiểm tra xem đã được khóa chặt chưa.
- Cắm thiết bị và chọn chức năng phù hợp trên bảng điều khiển.
- Thiết bị sẽ tự động dừng sau khi xay. Rút phích cắm của thiết bị và đợi cho đến khi lưỡi dao dừng hẳn .
- Lấy bình thủy tinh ra bằng cách xoay ngược chiều kim đồng hồ , tháo nắp và đổ sinh tố ra.



(Hình 1)

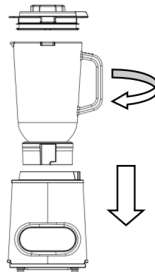


(Hình 2)

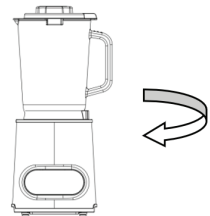

(Hình 3)

Với cối phụ

- Đổ nguyên liệu vào cối xay, đậy nắp thật chặt.
- Lắp cối xay vào thân chính, và xoay theo chiều kim đồng hồ để khóa lại. Nhấc cối xay lên để kiểm tra xem đã được khóa chặt chưa.
- Cắm thiết bị và chọn tốc độ theo ý muốn.
- Thiết bị sẽ tự động dừng sau khi xay. Rút phích cắm của thiết bị và đợi cho đến khi lưỡi dao dừng hẳn .
- Tháo cối xay bằng cách xoay ngược chiều kim đồng hồ , tháo nắp cối và đổ thực phẩm

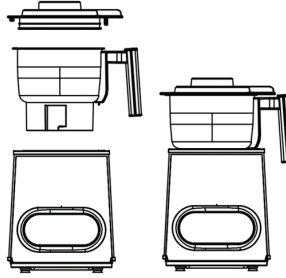

Thức ăn trẻ em :

Để xay thức ăn đã nấu chín :

- Cắt thức ăn thành từng miếng nhỏ, thêm một ít súp với thịt hoặc rau rồi trộn với các nguyên liệu. Chọn chức năng bạn cần và nhấn 'bắt đầu' (Start) trên bảng điều khiển.

Mứt trái cây :

- Cắt trái cây thành từng miếng nhỏ, thêm một ít sữa, nước hoặc nước trái cây rồi trộn với các nguyên liệu. Chọn chức năng bạn cần và nhấn 'bắt đầu' (Start) trên bảng điều khiển.

⚠ THẬN TRỌNG: Thời gian xay tối đa không quá 1 phút khi làm việc liên tục. Thiết bị sẽ tự động dừng nếu thời gian làm việc quá 1 phút và bạn nên xay lại sau 1 phút dừng. Để bảo vệ tốt hơn tuổi thọ sử dụng của thiết bị, không nên sử dụng thiết bị quá 6 lần liên tiếp. Để thiết bị nguội trong 45 phút sau 6 lần làm việc liên tiếp, nếu không động cơ có thể bị hỏng.

⚠ THẬN TRỌNG: Vui lòng không sử dụng thiết bị nếu bình thủy tinh rỗng. Khi sử dụng thiết bị, lượng chất lỏng ít nhất phải chạm tới bề mặt lưỡi dao.

⚠ THẬN TRỌNG: Không đổ nguyên liệu nóng vào bình thủy tinh. Làm nguội thực phẩm trong vài phút trước khi xay.

⚠ THẬN TRỌNG: Phải kiểm tra xem tất cả các thành phần thực phẩm đã được trộn đều hay chưa trước khi sử dụng.

Tổng quan:

Để có hiệu quả xay tốt hơn, đảm bảo lượng nguyên liệu có thể bao phủ hoàn toàn lưỡi cắt trước khi xay.



BẢO TRÌ & VỆ SINH MÁY XAY

- Đầu tiên rút phích cắm của thiết bị.
- Chỉ sử dụng miếng bọt biển ướt để vệ sinh phần thân chính. Không đặt thân chính của thiết bị vào nước hoặc chất lỏng khác để vệ sinh.

Chức năng sử dụng được đề xuất			
Chức năng	Cách sử dụng/Thành phần	Dung tích tối đa được đề xuất	Thời gian chương trình đặt trước
Nước ép trái cây	Đồ uống lạnh/Cocktail	1.5 lít	1 phút
	Đồ uống có kem/sữa	1.2 lít	
Sinh tố	Đầu tiên đổ trái cây tươi và nguyên liệu lỏng vào bình thủy tinh, bao gồm sữa chua, sữa và nước trái cây. Sau đó thêm đá hoặc thực phẩm đông lạnh, bao gồm trái cây đông lạnh, nước đá và kem.	1 lít	
Xay đá	Sử dụng nước trái cây hoặc đá đông lạnh để làm sinh tố bằng chức năng Xay đá. Hiện tượng thay đổi tốc độ là hiện tượng bình thường trong quá trình xay.	200g (10 viên đá)	45s
Vệ sinh	Rửa sạch bình thủy tinh trước khi lau sạch. Để có hiệu quả xay tốt hơn, nên rửa sạch và làm khô hoàn toàn bình thủy tinh trước khi lắp lại.	500ml Nước ấm	20s



THÔNG SỐ KỸ THUẬT

Điện áp định mức	220 – 240 V
Tần số định mức	50/60 Hz
Công suất định mức	1000W
Dung tích làm việc đề xuất	1.5L

Theo Chỉ thị CE 2002/96/CE, thông tin quan trọng liên quan đến việc thải bỏ thiết bị phù hợp:

- Không được thải bỏ thiết bị này như rác thải sinh hoạt khi hết thời gian sử dụng.
- Thiết bị phải được mang đến trung tâm thu gom rác thải được cấp phép tại địa phương hoặc đến đại lý bán sản phẩm này.
- Thải bỏ riêng thiết bị gia dụng có thể tránh được những hậu quả tiêu cực có thể xảy ra đối với môi trường và sức khỏe do việc thải bỏ không đúng cách, đồng thời tái chế các vật liệu cấu tạo máy, giúp tiết kiệm đáng kể năng lượng và tài nguyên cho xã hội. Để nhắc nhở về việc thải bỏ riêng các thiết bị gia dụng, sản phẩm này được đánh dấu bằng logo thùng rác có bánh xe được đánh dấu chéo.



HÄFELE

Häfele Vn Llc.

Phone: (+8428)39 113 113

Email: Info@hafele.com.vn

